



THE TIME & TEMPERATURE COMPANY™

Model: INTP626

Infrared/Thermocouple Probe Thermometer

Infrared: -67 to +482°F/-55 to +250°C
Thermocouple: -67 to +626°F/-55 to +330°C

Perfect For

- Non-contact surface temperatures
- Internal temperature measurement with thermocouple probe

Easy To Use

- Rapid response
- Data-hold
- One-button operation
- HACCP check lights & icons

Features

- Waterproof
- Shatterproof
- Dual function
- Maximum, minimum and lock for continuous scanning
- White light target illumination
- Distance:spot = 2.5:1
- Battery status indication
- Food-safe ABS plastic
- Auto-off
- Battery and instructions included

Get Professional Results Every Time!

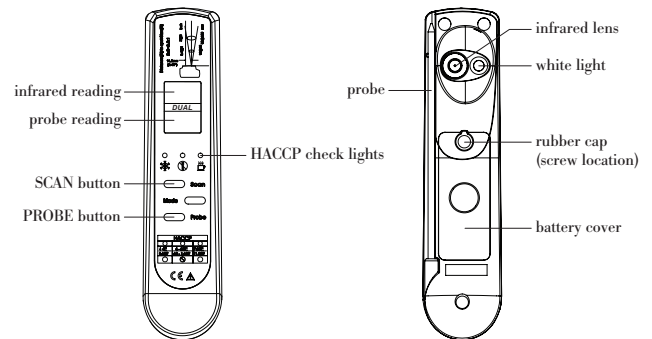
Monitoring temperature is essential to keeping food safe. The versatile INTP626 is perfect for any application. Simply point the infrared sensor lens toward the target and press SCAN to get a quick reading of surface temperatures or flip down the rapid-response thermocouple probe to measure internal temperatures. Integrated HACCP check lights and icons instantly show if temperatures are within HACCP guidelines for safe food temperatures.

Minimum, Maximum and Lock

The INTP626 also offers Minimum, Maximum, and Lock modes. Minimum mode displays the lowest temperature among multiple targets. Maximum mode displays the highest temperature among multiple targets. While Lock mode continuously displays the

temperature for up to 60 minutes. This is particularly useful for continuous temperature monitoring.

Note: Remove sticker from display before use.



Note: In the following instructions, names of the control buttons are shown in CAPS. Function information that appears on the display is shown in BOLD CAPS.

Battery Installation

Power off the unit before installing the battery. A malfunction may occur if the power is on when the battery is installed. If a malfunction occurs, restart the device.

1. Holding the device on the outside edges (do not press buttons), pick off the rubber cap on the battery cover using a small Phillips screwdriver.
2. Remove the screw on the battery cover by turning it counter clockwise.
3. Remove the battery cover, top edge first.
4. Install two 1.5V AAA batteries observing polarity shown in compartment.
5. Replace the battery cover, bottom edge first.
6. Fasten the screw on the battery cover by turning it clockwise.
7. Replace the rubber cap over the screw by pushing it down securely.



Operating Instructions

Mode Selection: MIN ⇒ MAX ⇒ LOCK ⇒ °C/°F ⇒ EMIS

A. Temperature Scale

To select temperature reading in Fahrenheit or Celsius:

1. Press the SCAN button to turn the thermometer on.
2. Press the MODE button four times. The °F or °C symbol flashes on the display.
3. Press the SCAN button to change the scale.

B. Infrared Thermometer

Infrared is the default mode of the INTP626.

Note: The INTP626 is intended for food service use – do not use for safety related applications.

1. Infrared Scanning

a. Distance:Spot = 2.5:1

For example, if the surface area being measured is 10" in diameter, then the thermometer must be within 25" of the target for an accurate reading.

Distance:Spot (FOV)= 2.5:1
Emissivity = 0.1~1, Step .01
Wave Length = 8µm-14µm

- b. Aim the infrared lens at the target and press the SCAN button to display the surface temperature. **The white light automatically turns on to illuminate the target.**
- c. Measurement continues as long as the SCAN button is pressed. The newest reading updates the display.
- d. When the SCAN button is released, **HOLD** appears on the display and the last reading remains visible for 15 seconds before the unit automatically powers off.

2. Minimum Mode

- a. Press the SCAN button to turn the thermometer on.
- b. Press the MODE button once. **MIN** flashes on the display.
- c. Press and hold the SCAN button to confirm the Minimum Mode and display the lowest temperature among multiple targets.

3. Maximum Mode

- a. Press the SCAN button to turn the thermometer on.
- b. Press the MODE button twice. **MAX** flashes on the display.
- c. Press and hold the SCAN button to confirm the Maximum Mode and display the highest temperature among multiple targets.

4. Lock Mode

This is particularly useful for continuous temperature monitoring.

- a. Press the SCAN button to turn the thermometer on.

- b. Press the MODE button three times. **LOCK** flashes on the display.
- c. Press the SCAN button to confirm the Lock Mode. The thermometer continuously displays the temperature for up to 60 minutes or until the SCAN button is pressed again.

5. Emissivity






Everything gives off a certain amount of radiation. Emissivity is the measure of this thermal radiation. The infrared thermometer is supplied with a default emissivity of 0.95, which standard for most uses. The emissivity of the thermometer can be changed from 0.05 (5E) to 1 (100E). **Only experienced personnel should attempt to make changes.** For information relating to the emissivity of specific materials, please contact CDN.

- a. Press the SCAN button to turn the thermometer on.
- b. Press the MODE button five times to enter Emissivity Mode. **95E** flashes on the display.
- c. Press the SCAN button to adjust the emissivity value in 0.01 (1E) increments.
- d. Press the MODE button again to exit Emissivity Mode.

Note: Non-contact infrared thermometers are not recommended for use in measuring the temperature of shiny or polished metals.

6. Error Messages

The INTP626 incorporates visual diagnostic messages as follows:

- a. **HI** or **LO** is displayed when the temperature being measured is outside the infrared range of the instrument.
 1. **HI** indicates that the temperature is higher than +482°F/+250°C. 
 2. **LO** indicates that the temperature is lower than -67°F/-55°C. 
- b. Allow a minimum 30 minutes for the thermometer to stabilize to the working/room temperature.
 1. **ER2** is displayed when the thermometer is exposed to rapid changes in the ambient temperature. 
 2. **ER3** is displayed when the ambient temperature exceeds -32°F/0°C OR +122°F/+50°C. 
- c. For all other error messages it is necessary to reset the thermometer. 
 1. Wait for the thermometer to power off.
 2. Remove the battery and wait for a minimum of one minute.
 3. Reinstall the battery (*see Battery Installation*).
 4. Press the SCAN button to turn the

thermometer on.

5. If the error message remains, please contact CDN for further assistance.

C. Thermocouple Probe

Important: The probe may be damaged if measurement temperature is lower than -67°F/-55°C OR higher than +626°F/+330°C.

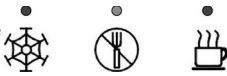
1. Flip down the probe until fully extended.
2. Insert the probe at least 1"/2.5 cm into the food.
3. Press the PROBE button to continuously display the temperature for up to 4 minutes before the unit automatically powers off.

Note: Pressing the PROBE button may interrupt the last infrared HOLD reading. Press the PROBE button again to return to infrared scanning.

4. Wearing a heat resistant glove, flip the probe back into the case when finished.

Important: Do not twist the probe or rotate it in wrong direction. Exceptional stress on probe may cause it to break.

CAUTION: Probe may be HOT after use. Always wear a heat resistant glove to touch the stainless steel probe or sensor cable during or just after cooking. **Do not touch with bare hands.**



D. HACCP Check

Integrated HACCP check lights and icons instantly show if temperatures are within HACCP guidelines for safe food temperatures.

Note: The GREEN and RED lights will always be lit before power off.

HACCP		
●	●	●
↓4°C	4-60°C	↑60°C
↓40°F	40-140°F	↑140°F
○	⊗	○

1. A GREEN light above the SNOWFLAKE icon (❄️) indicates a safe cool or frozen condition below 40°F/4°C.
2. A GREEN light above the HOT CUP icon (☕) indicates a safe holding temperature above 140°F/60°C.
3. A RED light above the DON'T EAT icon (⊗) indicates that the temperature is within the **HACCP Danger Zone** of 40 to 140°F/4 to 60°C.

E. Battery Status

The thermometer incorporates visual battery status indication:

1. 🔋 **Battery OK:** measurements are possible
2. 🔋 **Battery Low:** replace battery with two 1.5V AAA Alkaline cells; measurements are possible
3. 🔋 **Battery Exhausted:** replace battery; measurements are not possible

EMC/RFI

Readings may be affected if the unit is operated within a radio frequency electromagnetic field strength of approximately 3 volts per meter, but the performance of the instrument will not be permanently affected.

Care of Your Product

- The sensor lens is the most delicate part of the thermometer and should be kept clean at all times. Take care when cleaning the lens. Use only a soft cloth or cotton swab with water or rubbing alcohol. Allow the lens to dry fully before using the thermometer.
- Do not submerge any part of the thermometer in water. Wipe clean with a damp cloth.
- Store the thermometer at room temperature between -4 to +149°F/-20 to +65°C.

Precautions

- Dispose of used battery promptly and keep away from children.
- Always wear a heat resistant glove to touch the stainless steel probe during or just after cooking. **Do not touch with bare hands.**
- Keep the batteries, stainless steel probe and sensor cable away from children.
- Clean the probe and dry thoroughly after use.
- Do not clean the case with abrasive or corrosive compound, which may scratch the plastic and corrode the electronic circuits.
- Do not subject the unit to excessive force shock, dust, temperature or humidity, which may result in malfunction, shorter electronic life span, damaged battery and distorted parts.
- Do not tamper with the unit's internal components. Doing so will invalidate the warranty on the unit and may cause unnecessary battery damage and distorted parts.
- Do not subject the unit to excessive exposure to direct sunlight.
- To avoid deformation, do not place the unit in extreme temperatures. Never burn the probe directly over the fire. Do not use the probe when the temperature is above 626°F/330°C. Doing so will deteriorate the probe.
- Do not use the thermometer in a microwave oven.
- Always read the users manual thoroughly before operating.

CAUTION: Avoid keeping the thermometer too close to objects that continuously generate high heat for long periods (i.e., hot plate). This can cause the thermometer to overheat.



Specifications

	Infrared Scan	Thermocouple Probe (K type, Grounded)
Measurement Range	-67 to +482°F/ -55 to +250°C	-67 to +626°F/ -55 to +330°C
Operating Range	32 to 122°F/0 to 50°C	
Accuracy (Tobj=59-95°F/ 15-35°C, Tamb=77°F/25°C)	±1.1°F/±0.6°C	below 23°F/-5°C: ±1.8°F/±1°C 23 to 149°F/-5 to 65°C: ±0.9°F/0.5°C above 149°F/65°C: +/- 1% of reading
Accuracy (Tamb=73 ±37.4°F/ 23 ±3°C)	-27 to 32°F/-33 to 0°C: ±(1.8°F/1°C + 0.1/degree C) 32 to 149°F/0 to 65°C: ±1.8°F/±1°C 149 to 482°F/65 to 250°C: ±1.5% of reading	
Distance:Spot	2.5:1 optics ratio	
Emissivity Range	0.95 default; adjustable 0.1 to 1, step .01	
Resolution (14.18 to 392°F/ -9.9 to 199.9°C)	0.5°F/0.2°C	0.5°F/0.2°C
Power Supply	2 DC 1.5V AAA Alkaline batteries	
Battery Life	Typ. 18 hours continuous use (auto power off after 15 seconds)	
Dimensions	1.5 W x 7.48 H x 0.87 D (inches)/ 38 W x 160.09 H x 22.18 D (mm)	
Weight	3.15 oz/98.1 g (including battery)	

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



1-Year Limited Warranty: Any instrument that proves to be defective in material or workmanship within one year of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947. This warranty does not cover damage in shipment or failure caused by tampering, obvious carelessness or abuse



Component Design Northwest, Inc.
PO Box 10947
Portland, OR 97296-0947
Tel 800 338-5594
Fax 800 879-2364
Web www.cdn-timeandtemp.com



*USDA does not endorse any product, service or organization.